


# SPEEDRAK PALLET RACK BEAM INSTALLATION INSTRUCTIONS

## UPRIGHT

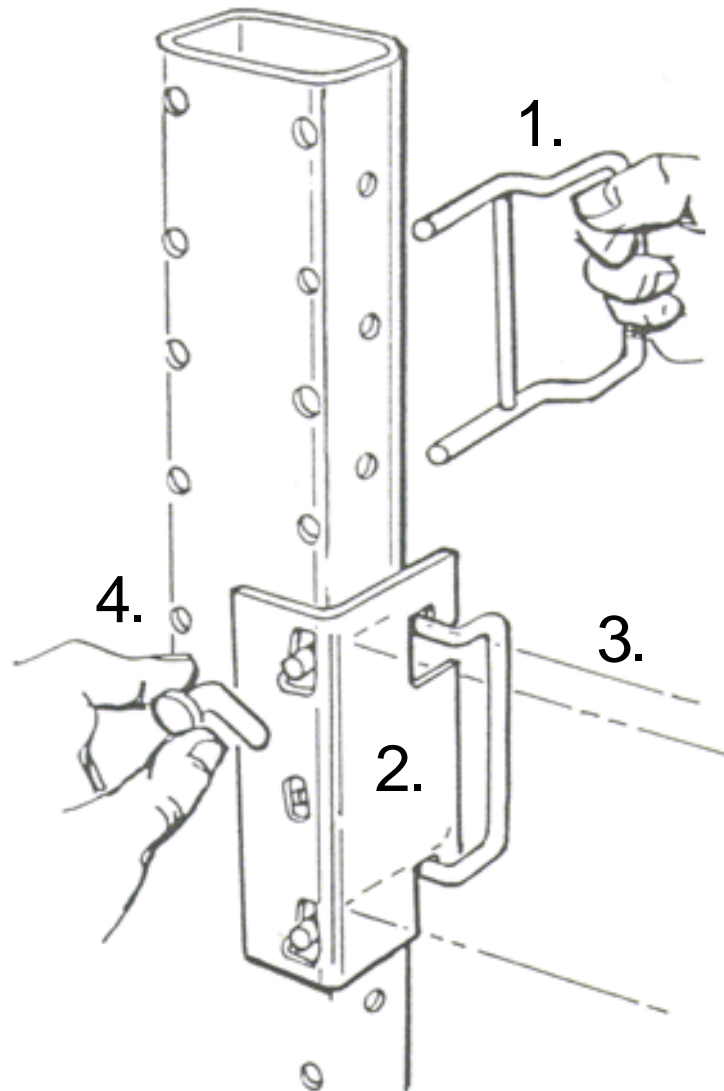

### SPEEDRAK BEAM INSTALLATION PROCEDURE

READ BASIC PALLET RACK INSTALLTION INSTRUCTIONS FOR OTHER INFO

1. INSERT "HANDLE" CONNECTORS FROM THE REAR OF THE UPRIGHT FRAME.  
(REPEAT ON SECOND UPRIGHT AT SAME HEIGHT)
2. CLIP THE BEAM ENDS OVER THE CONNECTOR IN FRONT & REAR.  
(RODS PROTRUDE THROUGH BEAM END CLIP IN FRONT)
3. DRIVE BEAM DOWN ONTO CONNECTOR WITH MALLET.
4. INSERT SAFETY PIN INTO CENTER HOLE OF BEAM END CLIP

**FOR QUESTIONS OR HELP WITH INSTALLATION, CALL: PREFERRED EQUIPMENT @ 1-800-711-8698**